ALUMINUM NAILING FIN REMOVAL

Nailing Fin Removal for SunClad Windows

TOOLS NEEDED: Pliers or Channel Locks

- 1. Place pliers/channel locks on the outer edge of nailing fin, grasping onto the nailing fin base (as shown in the first two images below)
 - Make sure the grip of the locks is tight against nailing fin
- 2. Bend the nailing fin back and forth until the nailing fin becomes loose from the frame
- 3. Break the nailing fin off of the frame
- 4. Repeat for each side



