


Adjustable 3-Way Hinge


UP & DOWN ADJUSTMENT (HEIGHT)

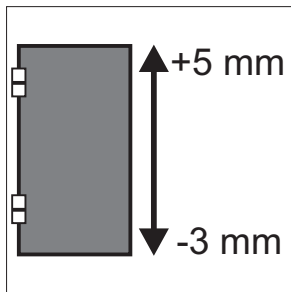

Raise +5 mm
Lower -3 mm



Loosen the set screw with 2,5 mm Allen key.

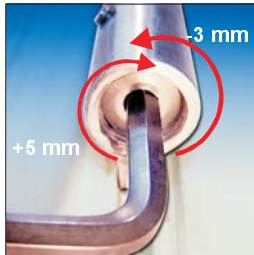


Make adjustment up & down with 5 mm Allen key.
*Clockwise +5 mm
*Counter clockwise -3 mm




Tighten the set screw with 2,5 mm Allen key.

> FACING LEFT HINGE SIDE SHOWN

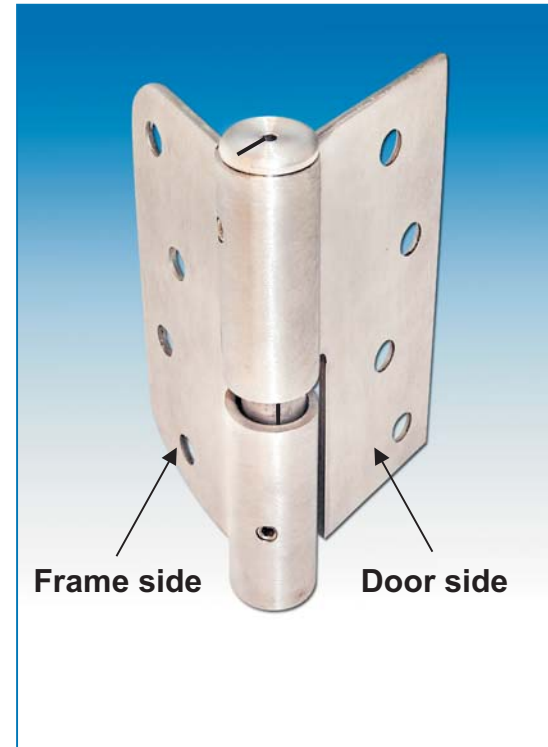

Top view

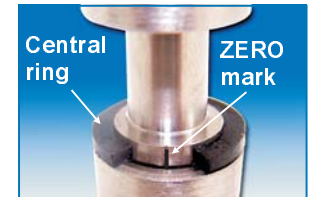

Center view



Bottom view

- All adjustment are made facing hinge side and are started from zero marks.
- Retighten set screws after each adjustment.

LEFT HAND AND RIGHT HAND HINGE ADJUSTMENT!


- Facing hinge side, doors with hinges mounted on left will be adjusted clockwise (as per pictures), doors with hinges mounted on right will be adjusted counter clockwise (not shown on picture).

SIDEWAYS ADJUSTMENT (WIDTH)


FACING LEFT HINGE SIDE SHOWN

COMPRESSION ADJUSTMENT (IN & OUT)


FACING LEFT HINGE SIDE SHOWN

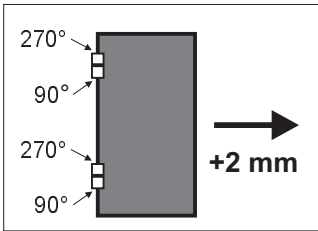


For +2mm side adjustment:
Loosen set screw (2) rotate top adjustment (3) **270°** clockwise from top zero mark (1) and tighten set screw, loosen set screw (6) rotate bottom adjustment (7) **90°** clockwise from center zero mark (5) and tighten set screw.

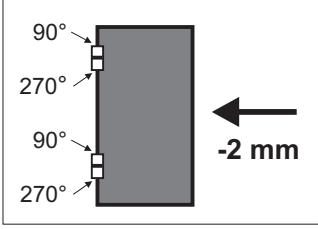


For -2mm side adjustment:
Loosen set screw (2) rotate top adjustment (3) **90°** clockwise from top zero mark (1) and tighten set screw, loosen set screw (6) rotate bottom adjustment (7) **270°** clockwise from center zero mark (5) and tighten set screw.

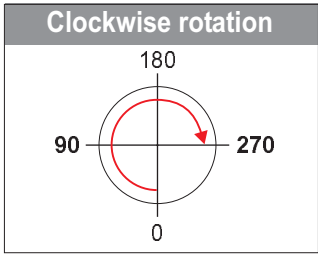


NOTE: Right hung hinge adjustment for hinges faced on right are counter clockwise using above settings.

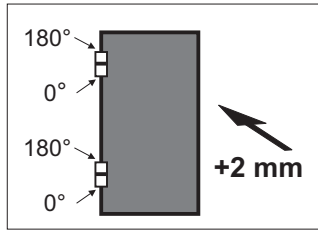

For +2mm compression adjustment:
Loosen set screw (2) rotate top adjustment (3) **180°** clockwise from top zero mark (1) and tighten set screw. (No other adjustment required)

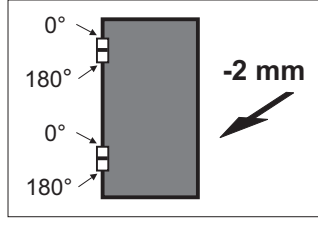

For -2mm compression adjustment:
Loosen set screw (2) rotate bottom adjustment (7) **180°** clockwise from top zero mark (1) and tighten set screw. (No other adjustment required)

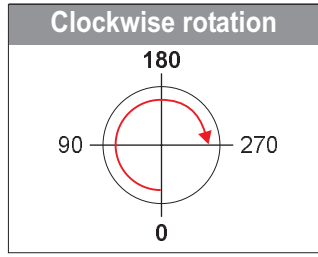

NOTE: Right hung hinge adjustment for hinges faced on right are counter clockwise using above settings.

STEPS TO FOLLOW



1 Set top zero mark at (0°).



2 Loosen the set screw with 2,5 mm Allen key.



3 Make adjustment on top with 2,5 mm Allen key.



4 Tighten the set screw with 2,5 mm Allen key.




5 Set center zero mark at (0°).



6 Loosen the set screw with 2,5 mm Allen key.



7 Make adjustment at bottom with 4 mm Allen key.

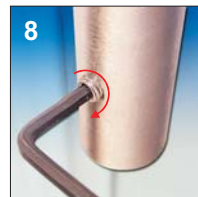

8 Tighten the set screw with 2,5 mm Allen key.

STEPS TO FOLLOW



1 Set top zero mark at (0°).



2 Loosen the set screw with 2,5 mm Allen key.




3 Make adjustment on top with 2,5 mm Allen key.



4 Tighten the set screw with 2,5 mm Allen key.




5 Set center zero mark at (0°).

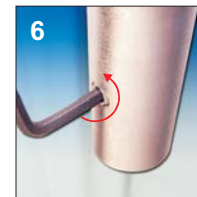

6 Loosen the set screw with 2,5 mm Allen key.



7 Make adjustment at bottom with 4 mm Allen key.

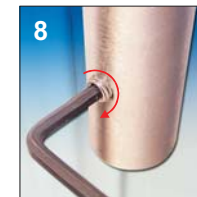

8 Tighten the set screw with 2,5 mm Allen key.